


DELAY TIME SETTING

PHASE SHIFT With OPERATION CONTROLLER

Description

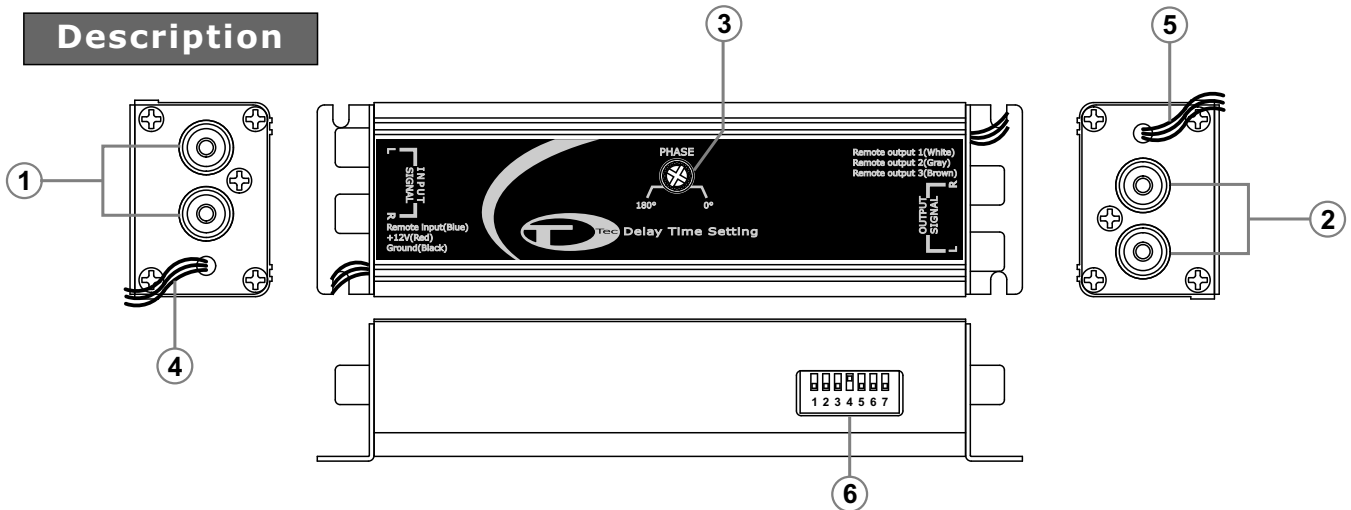

1. Audio-In

Connect to the Audio out jack of your Car Head-unit.

2. Audio-Out

Connect to the Audio in jack of your Car Amplifier.

3. Phase Adjust.

4. Remote-In

Connect to the ACC of your Vehicle.

5. Remote-Out

Connect to the Remote-In of your Car Equipment.

6. Mode-Switch

General Feature

This product by car audio accessory equipment have the 2 function.

Phase shift

You can adjust input audio signal phase.(0°~180° variable)

Remote time delay

You can select various Remote Timing.
(1 x 3 Output at the 6 modes)

How can used

■ Adjusting the Phase Shift.

If turn the Phase Shift volume to the right output audio signal phase variable from 0°~180°

■ Control the Remote time delay

MODE TABLE

	SW1	SW2	SW3	SW4	SW5	SW6
Mode 1	L	L	L	L	L	L
Mode 2	L	H	L	L	L	L
Mode 3	L	L	H	L	L	L
Mode 4	L	L	L	H	L	L
Mode 5	L	L	L	L	H	L
Mode 6	L	L	L	L	L	H

L-DOWN H-UP

TIME CHART

